Altistart 22 & Enclosed Altistart 22 soft starters

for three-phase asynchronous motors

eCatalog

2014







This page was intentionally left blank.

Contents

	Intro	oduction	4
		Applications	4
		Product	6
		Functions	8
	Spe	cifications	g
		Environmental	C
		Electrical	1C
		I/O & Control	1C
•	Sho	ort Circuit Current Ratings	11
•	Sele	ection Tables	14
		ATS22●●S6 & ATS22●●S6U	14
		ATS22●●Q	15
•	Dim	ensions	16
•	Acc	essories & Options	20
•	Enc	losed Altistart 22	24
•	Qua	ılity Assurance	36
_	Serv	vices & Support	38

Introduction



Introduction

The AltistartTM 22 soft start - soft stop unit supports the controlled starting and stopping, through voltage and torque control, of 3 HP to 500 HP (4 HP to 400 kW) three-phase asynchronous motors. It comes ready to use for standard applications with class 10 motor protection.

The Altistart 22 has been designed to satisfy the performance requirements of applications where ruggedness, the safety of personnel and equipment, and easy commissioning are at a premium.

The starting and stopping cycle is controlled by silicon-controlled rectifiers (SCRs) that manage the voltage to the motor. This limits the current during the starting and stopping cycle. The bypass function (based on a bypass contactor) has been made easier by integrating it into the starter. This bypasses the SCRs at the end of the starting process in order to limit the starter's heat dissipation and improve efficiency.

The unit also features thermal protection for motors as well as a monitoring capability for machines. SoMove PC software enables configuration files to be created and stored off-line and quickly commissions an installation. SoMove PC software can also be used for monitoring and diagnostics purposes.

The Altistart 22 contains an integrated display terminal which allows the user to change both the programming and the adjustment or monitoring parameters in order to adapt and customize the application in line with customer needs.






Applications

The integrated functions of the Altistart 22 are compatible with the more common types of applications found in the buildings, infrastructure or industrial sectors:

- Centrifugal pumps
- Piston pumps
- Fans
- Turbine blowers
- Refrigerant compressors
- Screw compressors
- Centrifugal compressors
- Material handling (conveyors, etc.)
- Specialist machines (agitators, mixers, centrifugal machines)



- A reduction in installation costs by optimizing product sizes, integrating the bypass function and reducing wiring time
- A reduction in the stress associated with electrical distribution by reducing the current peaks and line voltage drops caused by motors starting up
- A reduction in maintenance costs for machines by reducing mechanical stress



Introduction



Applications (continued)

Typical application areas

Examples of functions performed by the Altistart 22 depending on the application.

Type of machine	Functions performed by the Altistart 22
Centrifugal pump	 Controlled slowing-down and stopping Protection against underload or reversal of phase rotation direction
Piston pump	 Control of pump priming and the pump's direction of rotation
Fan	Detection of overloads and underloadsBraking torque on stopping
Turbine	 Thermal monitoring of motor via electrically isolated PTC probe
Refrigeration compressor	■ Control of starting characteristics
Screw compressor	 Protection against reversal of phase rotation direction
Centrifugal compressor	 Protection against reversal of phase rotation direction
Conveyor	 Monitoring of overloads for incident detection or underloads for break detection
Conveyor belt	 Second set of motor parameters depending on the load transported
Lifting screw	 Monitoring of overloads for hard spot detection or underloads for break detection
Agitator	 Displaying the current indicates the density of the material.
Mixer	 Displaying the current indicates the density of the material. Boost on start-up
Refiner	■ Torque control on starting and stopping

Dedicated applications

The ATS 22 can be used for applications outside the standard characteristics, but this could involve derating to at least the next lowest level.

Examples of applications outside the standard characteristics:

- Greater number of starts
- Motor thermal protection higher than class 10
- Excess current required at time of start
- Certain ambient temperatures:
 - □ For ambient temperatures between 104 °F (40 °C) and 140 °F (60 °C), derate the nominal current of the Altistart by 2.2% for each additional degree.
- Certain altitudes
 - □ For altitudes between 3,300 ft (1000 m) and 6,600 ft (2000 m), derate the nominal current of the Altistart 22 by 2% for each additional 330 ft (100 m).

Introduction



Integrated keypad display

Product

The Altistart 22 is offered in 2 voltage ranges:

- ATS22•••S6U or ATS22•••S6 for three-phase motors, 208 V to 600 V @ 50/60 Hz
- ATS22•••Q for three-phase motors, 230 V to 440 V @ 50/60 Hz

Simplify installation

- Integrated bypass reduces the number of external components: power wiring, contactor and control wiring for coil
- Wiring 6 terminals instead of 12 saves time and cost
- Fewer components and wiring points reduces heat dissipation allowing for a smaller enclosure
- Fewer components improves the reliability of the installation and decreases maintenance cost

Decrease operating costs

- Reduces operating costs of your machine by controlling motor current in-rush and reducing mechanical stress from motor starting and stopping
- Conformal coated printed circuit boards provide enhanced resistance to harsh environments, increasing the service life of your installation and reducing maintenance cost.

Improve machine performance

- True three-phase control and other protection functions monitor and protect your machine to sustain up-time
- Soft starting and soft stopping reduces mechanical stress on your machine, increasing productivity while protecting your delicate goods

Enhance communication

The Altistart 22 offers the following communication features to make programming and communicating simple:

- The integrated keypad display features:
 - A 4 x 7 segment display to provide useful real-time visual feedback
 - A 4 button keypad for simple navigation through configuration menus
 - 4 LED indicators (Ready, Communication, Run, & Trip)
- The easy start menu guides you through the basic parameters to get you up and running quickly
- The multi-function integrated Modbus™ port allows connection to either:
 - ☐ A remote-mount keypad to allow access from outside of an enclosure
 - $\hfill\Box$ Connection to a Modbus network for remote communication
 - □ SoMove[™] PC software for configuration and diagnostics
 - □ Altistart 22 iPad App for creating, saving, and transferring configurations from an iPad to the Altivar 22



ATS22 iPad app




Additional fans

Options

The Altistart 22 range also offers a number of options:

- Additional fans to support a greater number of starts
- A remote terminal unit can be installed on the front face of a floor-standing enclosure with IP 54/NEMA 12 or IP 65 protection (depending on the model).
- Protection shrouds for terminals to ensure compliance with IP 20 degree of protection

Introduction

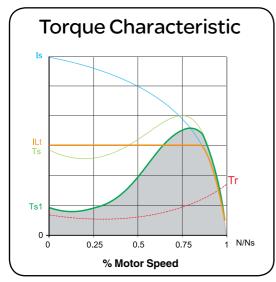

Asynchronous motor

Ts: Across the line starting torque Is: Across the line starting current

Altistart 22

Ts1: Total torque range available with an Altistart 22, which is dependent on the current limit (ILt) setting.

Load

Tr: Resistive torque must always be less than the Ts1 torque, or the motor will not start.

Start	s per hour	`
Soft starter	Number of sta (S4 d	•
	Without additional fan	With additional fan
ATS22D17•D88•	6	10
ATS22C11●C17●	4	10
ATS22C21•C59• (fan comes as standard)	-	4

Possible number of starts per hour based on a starting capacity of 3.5 In for 20 seconds (\$4 motor duty) after adding a fan.

Product (continued)

Selection criteria

The Altistart 22 has been designed for normal duty applications requiring up to 350% of rated current (IcL). Heavy duty applications will require selecting a larger starter.

For a chosen application, the choice of starter will depend on the following

- The power and nominal current (In) on the motor name plate
- Duty cycle
- Starting current capacity
- Number of starts per hour
- Motor thermal protection class

Duty cycle

S1 motor duty: Duty cycle of starting followed by operation at constant load enabling the thermal stability to be reached.

S4 motor duty: Duty cycle of starting, operation at constant load, and an idle period. This cycle is characterized by a load factor.

These motor duties are described in more detail in IEC 60034-1.

Starting current capacity

The standard starting current capacity for a class 10 motor is:

- S1 motor duty: 3.5 In for 40 seconds with a cold motor
- **S4 motor duty:** With a load factor of 90% of full load and *n* starts per hour (see table "Starts per hour"), 3.5 In for 20 seconds or an equivalent thermal cycle. In this case, the motor thermal protection must conform to protection class 10.

The Altistart 22 rated current is limited to 3.5 IcL. IcL is the nominal current of the Altistart 22. If the application requires a higher rated starting current (> 3.5 lcL), the soft starter must be oversized. Use the button above to navigate to the Altistart 22 selection tables on page 14 to select a part number.

Number of starts per hour

The table to the left defines the maximum number of starts per hour for S4 motor duty. The number of starts per hour can be increased by adding a fan.

The following units can be fitted with an additional fan:

- ATS22D17S6U...C17S6U
- ATS22D17S6...C17S6
- ATS22D17Q...C17Q
- Units ATS22C21S6U...C59S6U, ATS22C21S6...C59S6, and ATS22C21Q...C59Q, come with a fan as standard.

Motor thermal protection class

Starting time per motor class											
Starting current		Protection class									
	Class 10	Class 20	Class 30								
≤ 3.5 In maximum starting time	Nominal (1) 16 s	Nominal +1 (2) 32 s	Nominal +2 (3) 48 s								

- (1) Nominal = nominal size of the soft starter according to the nominal motor current (Motor FLA).
- (2) Nominal + 1 = oversize the soft starter by one rating compared to the nominal motor current (Motor FLA).
- (3) Nominal + 2 = oversize the soft starter by 2 ratings compared to the nominal motor current (Motor FLA).

Introduction



Functions

Adjustment functions

- Adjustment of the Altistart 22 soft start soft stop unit's current in line with the motor's nominal current
- Limiting current
- Selection of the type of stop (freewheel or deceleration)



Soft starter performance functions

- Management of the three supply phases
- Management of the ramp and torque supplied to the motor throughout the acceleration and deceleration period (significantly less jerk)
- Variety of control profiles to suit different applications
- Integrated and automated management of the bypass function at the end of the starting process (based on a bypass contactor), while preserving electronic protection features
- Option of connecting the starter in the motor delta connection in series with each winding. This supports the use of a soft start - soft stop unit with a lower rating. (only applies to the ATS 22●●●Q range)



Protection functions for the motor and machine

- Integration of configurable motor thermal protection
- Thermal protection for the Altistart 22 soft start soft stop unit
- Integrated processing of the PTC thermal probe with electrical isolation for optimum management for motor protection
- Monitoring of the duration and number of starts for better installation protection
- Management of stopping time before restart
- Protection against underloads and overcurrents in transient or steady state
- Automatic adjustment to the line frequency
- Detection of phase sequence
- Detection of phase loss
- Detection of imbalances between phases and of leakage currents (for the ATS 22...S6 and S6U ranges)



Functions to ease integration into control systems

- 3 programmable logic inputs
- 2 programmable N/C / N/O relay outputs
- Pluggable connectors for I/O
- Second set of parameters for motor operation
- Modbus serial link via RJ45 connector
- Display of soft start soft stop unit and machine states
- Display of I/O currents and states
- Error log, diagnostics for soft start soft stop unit
- Return to factory settings
- 4 LEDs on the front face (Ready, Communication, Run and Trip)

Specifications

Environmental & Electrical

Environmental specifications

Type of starter			ATS22D17S6UATS22C59S6U ATS22D17S6ATS22C59S6 ATS22D17QATS22C59Q
Conforming to standards			Altistart 22 soft starters conform to the strictest international standards and recommendations relating to electrical industrial control devices, in particular the standard IEC 60947-4-2 and the RoHS Directive.
Electromagnetic	Conducted and radiated emissions		IEC 60947-4-2, class A
compatibility EMC	Electrostatic discharge		IEC 61000-4-2 level 3
	Immunity to radiated radio- frequency electromagnetic field		IEC 61000-4-3 level 3
	Immunity to electrical transients		IEC 61000-4-4 level 4
	Surge immunity		IEC 61000-4-5 level 3
	Damped oscillating waves		IEC 61000-4-12 level 3
CE marking			The soft starts are C€ marked on the basis of European directives governing low voltage (72/73/EEC) and EMC (89/336/EEC).
Product certifications			CCC, CSA, C-Tick, GHOST, UL
Degree of protection For ATS22D17C11			IP 20 (IP 00 if no connections)
	For ATS22C14C59		IP 00
Maximum ambient pollution			Level 2 Conforming to IEC/EN 60664-1
Vibration resistance			1.5 mm from 2 to 13 Hz, 1 gn from 13 to 200 Hz Conforming to IEC/EN 60068-2-6
Shock resistance			15 gn for 11 ms Conforming to IEC 60068-2-27
Relative humidity			95% non-condensing, no dripping water Conforming to IEC/EN 60068-2-3
Ambient air	Storage	°F	-13158 °F (-2570 °C) conforming to IEC/EN 60947-4-2
temperature around the device	Operation	°F	14 °F (-10 °C) to 104 °F (40 °C) without derating, up to 140 °F (60 °C) with current derating of 2.2% per degree above 104 °F (40 °C)
Maximum operating altitude		ft	3300 ft (1000 m) without derating Above this, derate the nominal current by 2.2% per additional 330 ft (100 m) to a maximum of 6600 ft (2000 m)
Operating position Maximum permanent ar mounting position	gle in relation to the normal vertical		10°

Specifications


I/O & Control

Electrical specifications


Shorting contactor	Embedded
Three-phase supply voltage	208 V -15% to 600 V +10%
Input frequency	Automatic sensing: 50 Hz to 60 Hz frequency (-5% to +5%)
Current range	17 A to 590 A
Control voltage power requirements	ATS22S6U = 110 V ac (-15% to +10%) or ATS22S6 = 220 V ac (-15% to +10%)
Logic input voltage	ATS22S6U = 110 V ac (-15% to +10%) or ATS22S6 = 24 V dc (±6 V dc)
1 PTC probe input	750 Ω at 77 °F (25 °C), tripping between 2600 Ω and 3100 Ω
Logic inputs	3; "LI1" = run enable, "LI2" and "LI3" are prorammable ATS22S6U = 110 V ac or ATS22S6 = 24 V dc
Relay outputs	2 programmable Form C relays Normally Open/Normally Closed (N.O./N.C.), maximum switching = 8 A under 230 V ac or V dc
I/O connectors	Removable plug

I/O & Control specifications

ATS22 ••• S6U control terminals



ATS22...S6 & ATS22...Q control terminals



110 V ac with 110 V ac logic inputs

230 V ac with 24 V dc logic input

Terminal	Function	Characteristics	Terminal	Function	Characteristics
CL1 CL2	ATS22 control power supply	110 V ac +10% 110 V ac -15%	CL1 CL2	ATS22 control power supply	230 V ac +10% 220 V ac -15%
R1B R1C R1A	Relay 1 normally closed Relay 1 common Relay 1 normally open	Max switching capability: 5 A- 250 V ac or 30 V dc on resistive load (p.f. = 1) 2 A-250 V ac or 30 V dc on inductive	R1B R1C R1A	Relay 1 normally closed Relay 1 common Relay 1 normally open	Max switching capability: 5 A- 250 V ac or 30 V dc on resistive load (p.f. = 1) 2 A-250 V ac or 30 V dc on inductive
R2B R2C R2A	Relay 2 normally closed Relay 2 common Relay 2 normally open	load (p.f.=0.4) Minimimal commutation capability: 100 mA 12 V dc	R2B R2C R2A	Relay 2 normally closed Relay 2 common Relay 2 normally open	load (p.f.=0.4) Minimimal commutation capability: 100 mA 12 V dc
LI1	Logic input 1	3 x 110 V logic inputs with 20 kΩ impedance Umax = 121 Vac, Imax = 5 mA	LI1	Logic input 1 Logic input 2	3 x 24 V logic inputs with 4.3 kΩ impedance Umax = 30 V, Imax = 8 mA State 1: U>11 V - I>5 mA State 0: U<5 V - I<2 mA
LI3	Logic input 3	State 1: U>79 V - I>2 mA State 0: U<20 V - I<15 mA Turn on/off time delay: Hardware: <15 ms	LI3 +24 V dc	Logic input 3 Float 24 Vdc(+) (1)	The 24 V power supply is limited to 42 mA (for both internal and external use). 24 V dc accuracy: 24 V ±6 V dc
СОМ	Common 110 Vac	■ Software: <70-85 ms (anti bounce)	сом	Float 24 Vdc(-)	Turn on/off time delay: Hardware: <15 ms Software: <70-85 ms (anti bounce)
PTC1 PTC22	PTC (+) PTC (-) Ground (shield)	PTC probe connection: Total PTC22 PTC (-) resistance of the probe circuit: 750 Ω at 77 °F (25 °C)	PTC1 PTC2 ±	PTC (+) PTC (-) Ground (shield)	PTC probe connection: PTC2 PTC (-) Total resistance of the probe circuit: 750 Ω at 77 °F (25 °C)

^{(1) 24} Vdc current is limited to 42 mA ±10 %.

⁽²⁾ The voltage is 11.8 V ±0.5 V when the communication is running, but not loaded externally. Maximum output current is 100 mA.

Short Circuit Current Ratings

ATS22 • • • S6U, 208/230 V

	Altistart 22		9	Short Circuit	Curre	ent Ratings ⁽⁵	5)			Minimum Enclosure		
	Ailistait 22		With	Circuit Breaker		With Fu	uses ⁽⁶⁾			Volu	ıme	
Power indicated on rating plate (HP)	Reference	NEC Full Load Current (A)	PowerPact (1, 2) (InverseTime) C1, C2 (4)	PowerPact ^(1, 2) (Instantaneous- Trip) C1, C2 ⁽⁴⁾	SCCR (kA) B (4)	Molded Case Switches	Fuse (A) C1, C2 (4)	SCCR (kA) B (4)	TeSys Contactor ⁽⁸⁾	No TeSys Contactor (4) (in³)	With TeSys Contactor (4) (in³)	
					208 V A	(4)						
3	ATS22D17S6U	10.6	HLL36040	HLL36030M71	100	HLL36000S15	15	100	LC∙D18	2310	4158	
7.5	ATS22D32S6U	24.2	HLL36070	HLL36050M72	100	HLL36000S15	40	100	LC∙D32	2310	4158	
10	ATS22D47S6U	30.8	HLL36100	HLL36100M73	100	HLL36000S15	50	100	LC∙D40A	2310	4158	
15	ATS22D62S6U	46.2	HLL36125	HLL36100M73	100	HLL36000S15	80	100	LC∙D50A	2772	4620	
20	ATS22D75S6U	59.4	HLL36150	HLL36150M74	100	HLL36000S15	100	100	LC∙D80	2772	4620	
25	ATS22D75S6U 59.4 ATS22D88S6U 74.8 ATS22C11S6U 88		HLL36150	HLL36150M74	100	HLL36000S15	125	100	LC∙D80	2772	4620	
30	ATS22C11S6U	88	JLL36250	HLL36150M74	100	HLL36000S15	150	100	LC•D115	3696	6468	
40	ATS22C14S6U	114	JLL36250	JLL36250M75	100	HLL36000S15	200	100	LC●D150	3696	6468	
50	ATS22C17S6U	143	JLL36250	JLL36250M75	100	JLL36000S25	250	100	LC∙F185	3696	6468	
50 60 75 100 125			LLL36400	JLL36250M75	100	JLL36000S25						
	ATS22C21S6U	169	EEE50400	LLL36400M37X	100	LLL36600S60X	250	100	LC●F265	11267	45000	
			LHL36350	LHL3640031M	42							
75	ATS22C25S6U	211	LHL36400	LHL3640032M	42	LLL36600S60X	350	100	LC•F330	11267	45000	
	ATOZZOZOGO	211	LLL36400	LLL36400M37X	100	EEEGGGGGGGG	000	100	2001 000	11207	40000	
100	ATS22C32S6U	273	LLL36600	LLL36600M37X	100	LLL36600S60X	450	100	LC●F400	11267	45000	
125	ATS22C41S6U	343	LLL36600	LLL36600M37X	100	LLL36600S60X	600	100	LC●F500	11267	45000	
150	ATS22C48S6U	396	MJL36800 PLL34080	PLL34080M68	100	PLL34000S60	700	100	LC●F500	10584	34272	
					230 V A	(4)				•		
3	ATS22D17S6U	10.6	HLL36040	HLL36030M71	100	HLL36000S15	15	100	LC∙D18	2310	4158	
5	ATS22D17S6U	15.2	HLL36040	HLL36030M71	100	HLL36000S15	30	100	LC∙D25	2310	4158	
10	ATS22D32S6U	28	HLL36070	HLL36050M72	100	HLL36000S15	45	100	LC∙D32	2310	4158	
15	ATS22D47S6U	42	HLL36100	HLL36100M73	100	HLL36000S15	70	100	LC∙D50A	2310	4158	
20	ATS22D62S6U	54	HLL36125	HLL36100M73	100	HLL36000S15	90	100	LC⊕D65A	2772	4620	
25	ATS22D75S6U	68	HLL36150	HLL36150M74	100	HLL36000S15	110	100	LC∙D80	2772	4620	
30	ATS22D88S6U	80	HLL36150	HLL36150M74	100	HLL36000S15	125	100	LC⊕D115	2772	4620	
40	ATS22C11S6U	104	JLL36250	HLL36150M74	100	HLL36000S15	175	100	LC⊕D150	3696	6468	
50	ATS22C14S6U	130	JLL36250	JLL36250M75	100	JLL36000S17 (7)	225	100	LC•D150	3696	6468	
60	ATS22C17S6U	154	JLL36250	JLL36250M75	100	JLL36000S25	250	100	LC●F185	3696	6468	
			LLL36400	JLL36250M75	100	JLL36000S25						
75	ATS22C21S6U	192		LLL36400M37X		LLL36600S60X	300	100	LC•F330	11267	45000	
			LHL36350	LHL3640031M	42							
100	ATS22C25S6U	248	LHL36400	LHL3640032M	42	LLL36600S60X	400	100	LC•F330	11267	45000	
			LLL36400	LLL36400M37X	100							
125	ATS22C32S6U	312	LLL36600	LLL36600M37X	100	LLL36600S60X	500	100	LC∙F400	11267	45000	
150	ATS22C41S6U	360	LLL36600	LLL36600M37X	100	LLL36600S60X	600	100	LC•F500	11267	45000	
200	ATS22C59S6U	480	MJL36800 PLL34080	PLL34080M68	100	PLL34000S80	800	100	LC●F630	10584	34272	

⁽¹⁾ Square D PowerPact circuit breakers. Maximum breaker size for SCCR is shown. The third character of the breaker catalog number may be an "L", an "F", an "M" or a "P". The following types of Square D breakers with lower interrupting ratings may be substituted for the breakers shown: HD, HG, HJ, JD, JG, JJ, LG, LJ, MG, PG, PJ, PK.

⁽²⁾ A smaller ampacity breaker within the same product family may be substituted for the one described.
(3) Short circuit rating of the combination exceeds the rating of the circuit breaker. Combinations including F500 contactor are rated 35 kA at 600V.

⁽⁴⁾ Suitable for use on a circuit capable of delivering not more than _B__rms symmetrical kiloAmperes, _A__Volts maximum, when protected by__C1__with a maximum rating of__C2__.

(5) For all models, rating indicates standard use conditions. For heavy duty condition, the user manual must be referred to.

(6) Molded case switches provide the disconnecting means, and fuses provide the short circuit protection. The molded case switch part numbers are only suggestions. Customer may choose to

use similar approved disconnecting means.
(7) JLL36000S17 may be replaced by JLL36000S25.
(8) Contactor may be LC1 or LC2 type. The next larger contactor may be substituted for the one shown. Contactors may be used in conjunction with circuit breaker protection and ATS22 soft starter for line and load isolation applications.

Short Circuit Current Ratings

ATS22●●●*S6U, 460/575 V*

	A 14: - 4 4 - CO		9	Short Circuit	Curre	ent Ratings (5)			Minimum	Enclosure	
	Altistart 22		With	Circuit Breaker		With Fu	uses ⁽⁶⁾			Volume		
Power indicated on rating plate (HP)	Reference	NEC Full Load Current (A)	PowerPact (1, 2) (InverseTime) C1, C2 (4)	PowerPact ^(1, 2) (Instantaneous- Trip) C1, C2 ⁽⁴⁾	SCCR (kA) B (4)	Molded Case (A) Switches C1,		SCCR (kA) B (4)	TeSys Contactor ⁽⁸⁾	No TeSys Contactor ⁽⁴⁾ (in ³)	With TeSys Contactor (4) (in³)	
					460 V A	(4)						
10	ATS22D17S6U	14	HLL36040	HLL36030M71	100	HLL36000S15	20	100	LC∙D18	2310	4158	
20	ATS22D32S6U	27	HLL36070	HLL36050M72	100	HLL36000S15	35	100	LC∙D32	2310	4158	
30	ATS22D47S6U	40	HLL36100	HLL36100M73	100	HLL36000S15	70	100	LC●D50A	2310	4158	
40	ATS22D62S6U	52	HLL36125	HLL36100M73	100	HLL36000S15	90	100	LC∙D65A	2772	4620	
50	ATS22D75S6U	65	HLL36150	HLL36150M74	100	HLL36000S15	110	100	LC∙D80	2772	4620	
60	ATS22D88S6U	77	HLL36150	HLL36150M74	100	HLL36000S15	125	100	LC•D115	2772	4620	
 75	ATS22C11S6U	96	JLL36250	HLL36150M74	100	HLL36000S15	150	100	LC•D115	3696	6468	
100	ATS22C14S6U	124	JLL36250	JLL36250M75	100	JLL36000S17 (7)	200	100	LC•D150	3696	6468	
125	ATS22C17S6U	156	JLL36250	JLL36250M75	100	JLL36000S25	250	100	L C•F185	3696	6468	
			LLL36400	JLL36250M75	100	022000000	200		200. 100		0.00	
150	ATS22D17S6U	180	LIL36350	LLL36400M37X	100	JLL36000S25	300	100	LC•F265	11267	45000	
			LHL36350	LHL3640031M	42	LLL36600S60X						
			LHL36400	LHL3640032M	42							
200	ATS22C25S6U	240	LLL36400	LLL36400M37X	100	LLL36600S60X	400	100	LC•F330	11267	45000	
			LIL36400	LLL30400IVI37X	100							
250	ATS22C32S6U	302	LLL36600	LLL36600M37X	100	LLL36600S60X	500	100	TeSys Contactor (*) LC ● D18	45000		
			LIL36500									
300	ATS22C41S6U	361	LLL36600	LLL36600M37X	100	LLL36600S60X	600	100	LC•F500	11267	45000	
800 ATS			LIL36600 MJL36800		65							
350	ATS22C48S6U	414	PLL34080	- PLL34080M68	100	PLL34000S60	700	100	LC•F500	10584	34272	
			MJL36800	-	65							
400	ATS22C59S6U	477	PLL34080	PLL34080M68	100	PLL34000S80	800	100	LC•F360	10584	34272	
					575 V A	(4)	•	•				
15	ATS22D17S6U	17	HLL36040	HLL36030M71	50	HLL36000S15	25	100	LC∙D40A	2310	4158	
25	ATS22D32S6U	27	HLL36070	HLL36050M72	50	HLL36000S15	45	100	LC∙D40A	2310	4158	
40		41	HLL36100	HLL36100M73	50	HLL36000S15	70	100			4158	
50		52	HLL36125	HLL36100M73	50	HLL36000S15	90	100			4620	
60		62	HLL36150	HLL36150M74	50	HLL36000S15	100	100			4620	
75 100		77 99	HLL36150 JLL36250	HLL36150M74 HLL36150M74	50 50	HLL36000S15 HLL36000S15	125 150	100			4620 6468	
125		125	JLL36250	JLL36250M75	50	JLL36000S17 (7)	200	100			6468	
150		144	JLL36250	JLL36250M75	50	JLL36000S25	250	100			6468	
			LLL36400 (3)	JLL36250M75								
200	ATS22C21S6U	192	LIL36350	LLL36400M37X	50	JLL36000S25 LLL36600S60X	300	100	LC•F330	11267	45000	
			LHL36350	LHL3640031M	18							
			LLL36400 (3)	LLL36400M37X								
250	ATS22C25S6U	242	LIL36400	(3)	50	LLL36600S60X	400	100	LC•F330	11267	45000	
			LHL36400	LHL3640032M	18							
300	ATS22C32S6U	289	LLL36600 (3) LIL36500	LLL36600M37X	50	LLL36600S60X	500	100	LC●F400	11267	45000	
350	ATS22C41S6U	336	LLL36600 (3)	LLL36600M37X	50	LLL36600S60X	500	100	LC•F500	11267	45000	
			LIL36600		25							
400	ATS22C48S6U	382	MJL36800 PKL36080	- PKL36080M68	25 50	PKL36000S60	600	100	LC•F500	10584	34272	
	ATS22D88S6U 7 ATS22C11S6U 9 ATS22C14S6U 1 ATS22C17S6U 1 ATS22C21S6U 2 ATS22C25S6U 2 ATS22C32S6U 2 ATS22C41S6U 3 ATS22C48S6U 3		MJL36800	-	25							
500	ATS22C59S6U	472	PKL36080	PKL36080M68	50	PKL36000S80	800	100	LC•F630	10584	34272	

*See footnotes on page 11

Short Circuit Current Ratings

ATS22•••S6 & *ATS22*•••Q, 208/600 *V*

The table below shows recommended combination ratings with fuse or circuit breaker protective device for ATS22 $\bullet\bullet\bullet$ Q & ATS22 $\bullet\bullet\bullet$ S6.

Soft starter 208/600 V- 60 Hz (+10%-15%) - Standard rating.

Suitable for use on a circuit capable of delivering not more than **__X**___ rms symmetrical Amperes, 575 Volts maximum, when protected by **__Z1**___ with a maximum rating of **__Z2**__.


Altistart 22	Max. short circuit current rating (SCCR)	Branch circuit protection	Rating		
	Х	Z1 ⁽¹⁾	Z 2		
ATS22D17Q, ATS22D17S6		AJT40	40 A		
ATS22D32Q, ATS22D32S6	5 kA	AJT70	70 A		
ATS22D47Q, ATS22D47S6		AJT100	100 A		
ATS22D62Q, ATS22D62S6		AJT125	125 A		
ATS22D75Q, ATS22D75S6		AJT175	175 A		
ATS22D88Q, ATS22D88S6	10 kA	AJT200	200 A		
ATS22C11Q, ATS22C11S6	TO KA	AJT250	250 A		
ATS22C14Q, ATS22C14S6		AJT300	300 A		
ATS22C17Q, ATS22C17S6		AJT400	400 A		
ATS22C21Q, ATS22C21S6		AJT500	500 A		
ATS22C25Q, ATS22C25S6		AJT600	600		
ATS22C32Q, ATS22C32S6	18 kA	2 x AJT350	2 x 350 A		
ATS22C41Q, ATS22C41S6		2 x AJT400	2 x 400 A		
ATS22C48Q, ATS22C48S6		2 x AJT500	2 x 500 A		
ATS22C59Q, ATS22C59S6	30 kA	2 x AJT600	2 x 600 A		

(1) Ferraz Shawmut manufacturer

Selection Tables

ATS22•••\$6U & ATS22•••\$6

Connection to the motor's power supply line

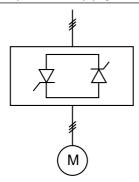

Example of connection to motor's power supply line

Moto	r													Soft start - se	oft stop unit, 20	8600 V, 50/0	60 Hz			
Powe	er indi	cated	on ra	ting p	late									Motor	Soft starter	Dissipated	Part number	Frame	Weig	jht
20)8 V	230 V		400 V		440 V		460 V		500 V		575 V		nominal current ⁽¹⁾ (Motor FLA)	rated current	power at nominal current		size		
														In	IcL					
HP	kW	HP	kW	HP	kW	HP	kW	HP	kW	HP	kW	НР	kW	Α	Α	w		•	lbs	kg
3	2.2	5	4	10	7.5	10	7.5	10	7.5	-	9	15	11	14	17	39	ATS22D17S6U ATS22D17S6	A	15.4	7
7.5	5.5	10	7.5	20	15	20	15	20	15	25	18.5	25	18.5	27	32	44	ATS22D32S6U ATS22D32S6	A	15.4	7
-	-	15	11	30	22	30	22	30	22	40	30	40	30	40	47	48	ATS22D47S6U ATS22D47S6	A	15.4	7
15	11	20	15	40	30	40	30	40	30	50	37	50	37	52	62	59	ATS22D62S6U ATS22D62S6	В	26.5	12
20	15	25	18.5	50	37	50	37	50	37	60	45	60	45	65	75	63	ATS22D75S6U ATS22D75S6	В	26.5	12
25	18.5	30	22	60	45	60	45	60	45	75	55	75	55	77	88	66	ATS22D88S6U ATS22D88S6	В	26.5	12
30	22	40	30	75	55	75	55	75	55	100	75	100	75	96	110	73	ATS22C11S6U ATS22C11S6	С	39.7	18
40	30	50	37	100	75	100	75	100	75	125	90	125	90	124	140	82	ATS22C14S6U ATS22C14S6	С	39.7	18
50	37	60	45	125	90	125	90	125	90	150	110	150	110	156	170	91	ATS22C17S6U ATS22C17S6	С	39.7	18
60	45	75	55	150	110	150	110	150	110	-	132	200	160	180	210	117	ATS22C21S6U ATS22C21S6	D	72.8	33
75	55	100	75	-	132	-	132	200	160	200	160	250	-	240	250	129	ATS22C25S6U ATS22C25S6	D	72.8	33
100	75	125	90	200	160	200	160	250	-	300	220	300	220	302	320	150	ATS22C32S6U ATS22C32S6	D	72.8	33
125	90	150	110	300	220	300	220	300	220	350	250	350	250	361	410	177	ATS22C41S6U ATS22C41S6	D	72.8	33
150	110	-	132	350	250	350	250	350	250	400	315	400	315	414	480	218	ATS22C48S6U ATS22C48S6	E	110.2	50
	132	200	160	400	315	450	355	400	315	500	400	500	400	477	590	251	ATS22C59S6U ATS22C59S6	E	110.2	50

⁽¹⁾ Maximum continuous current for class 10. It equates to the nominal current of a standard 4-pole, 400 V, class 10 motor (standard application).

⁽²⁾ Motor current /√3.


(4) Soft starters, when connected in an inside delta configuration, allow the use of motors of a larger size relative to the soft starters. In this configuration, the motor's nominal current can be up to 1.5 times the soft starter full load amps.

Selection Tables *ATS22*•••Q

Connection to the motor's power supply line

220 V control power supply on CL1, CL2

Motor							ft stop unit, 230	·	Hz			
	r indicat					Motor nominal current ⁽¹⁾ (Motor FLA)	nominal rated current power s current ⁽¹⁾ at nominal		Frame size	Weig	jht	
23	80 V	40	0 V	44	0 V	In	lcL					
HP	kW	HP	kW	HP	kW	Α	Α	w			lbs	kg
5	4	10	7.5	10	7.5	14.8	17	39	ATS22D17Q	Α	15.4	7
10	7.5	20	15	20	15	28.5	32	44	ATS22D32Q	A	15.4	7
15	11	30	22	30	22	42	47	48	ATS22D47Q	A	15.4	7
20	15	40	30	40	30	57	62	59	ATS22D62Q	В	26.5	12
25	18.5	50	37	50	37	69	75	63	ATS22D75Q	В	26.5	12
30	22	60	45	60	45	81	88	66	ATS22D88Q	В	26.5	12
40	30	75	55	75	55	100	110	73	ATS22C11Q	С	39.7	18
50	37	100	75	100	75	131	140	82	ATS22C14Q	С	39.7	18
60	45	125	90	125	90	162	170	91	ATS22C17Q	С	39.7	18
75	55	150	110	150	110	195	210	117	ATS22C21Q	D	72.8	33
100	75	-	132	-	132	233	250	129	ATS22C25Q	D	72.8	33
125	90	200	160	200	160	285	320	150	ATS22C32Q	D	72.8	33
150	110	300	220	300	220	388	410	177	ATS22C41Q	D	72.8	33
	132	350	250	350	250	437	480	218	ATS22C48Q	E	110.2	50
200	160	400	315	450	355	560	590	251	ATS22C59Q	E	110.2	50

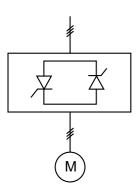


Example of connection to motor's power supply line

Connection to the motor's inside delta connection

220 V control power supply

Motor	•					Soft start - soft st	top unit, 230440 '	V - 50/60 Hz			
	r indicat		rating p		0 V	Motor nominal current (1), (2) (Motor FLA)	Soft starter rated current ⁽²⁾	Part number	Frame size	Weig	ht
23	ou v	40	υV	44	υV	In	lcL				
HP	kW	HP	kW	HP	kW	Α	Α			lbs	kg
7.5	5.5	15	11	20	15	25	14.4	ATS22D17Q	Α	15.4	7
15	11	30	22	30	22	48	27.7	ATS22D32Q	Α	15.4	7
25	18.5	60	45	60	45	70	40.4	ATS22D47Q	Α	15.4	7
30	22	75	55	75	55	93	53.7	ATS22D62Q	В	26.5	12
40	30	75	55	100	75	112	64.7	ATS22D75Q	В	26.5	12
50	37	100	75	100	75	132	76.2	ATS22D88Q	В	26.5	12
60	45	125	90	125	90	165	95.3	ATS22C11Q	С	39.7	18
75	55	150	110	150	110	210	121.2	ATS22C14Q	С	39.7	18
100	75	200	132	200	132	255	147.2	ATS22C17Q	С	39.7	18
125	90	250	160	250	160	315	181.9	ATS22C21Q	D	72.8	33
150	110	300	220	300	220	375	216.5	ATS22C25Q	D	72.8	33
200	132	350	250	350	250	480	277.1	ATS22C32Q	D	72.8	33
250	160	400	315	-	355	615	355.1	ATS22C41Q	D	72.8	33
300	220	450	355	500	400	720	415.7	ATS22C48Q	E	110.2	50
350	250	500	400	700	500	885	511	ATS22C59Q	E	110.2	50

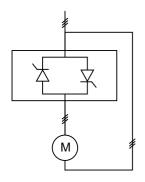

Example of connection to motor's inside delta connection

*Footnotes on page 14

Dimensions


Frame sizes A & B

Dimensions

Frame	ATS22 unit	(W x D x H)			
size	AT 522 Unit	in	mm		
Α	ATS22D17●●●, ATS22D47●●●	5.1 x 6.6 x 10.4	130 x 169 x 265		
В	ATS22D62●●●, ATS22D88●●●	5.7 x 8.1 x 11.6	145 x 207 x 295		



ATS22D17•••. ATS22D47•••

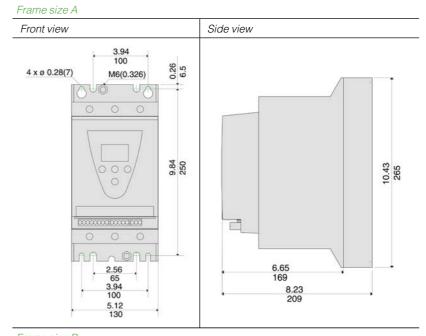



Frame size B

Front view

Side view

4.53
115
4.50
0.28(7)
M6(0.326)
F00
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0.3.15
0

Dimensions


Frame size C

Dimensions

Frame size	ATS22 unit	(W x D x H)				
	AT 522 UTILL	in	mm			
С	ATS22C11●●●, ATS22C17●●●	5.9 x 9 x 14	150 x 229.5 x 356			

Frame size C

Front view

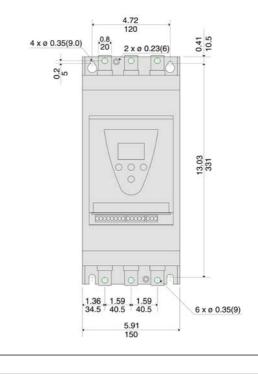


Schneider Altistart 22

Schneider Altistart 22

O Expressed individual color in its or in product of the color in the colo

ATS22C11•••... ATS22C17••• Side view

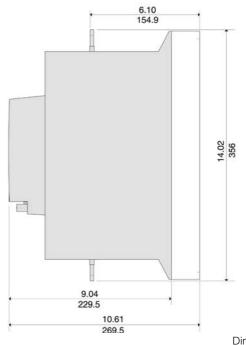


Dimensions

Frame size D

Dimensions

Frame	ATS22 unit	(W x D x H)				
size	AT 522 UTIL	in	mm			
D	ATS22C21•••, ATS22C41•••	8.1 x 11.8 x 16.7	206 x 299 x 425			

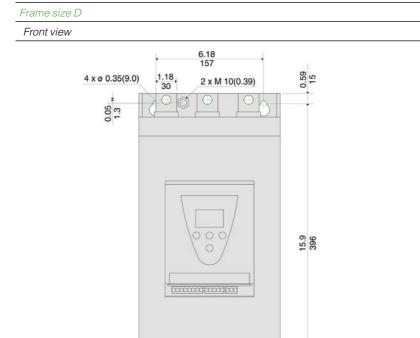


2.36 60

6 x ø 0.53(13.5)



ATS22C21•••... ATS22C41•••

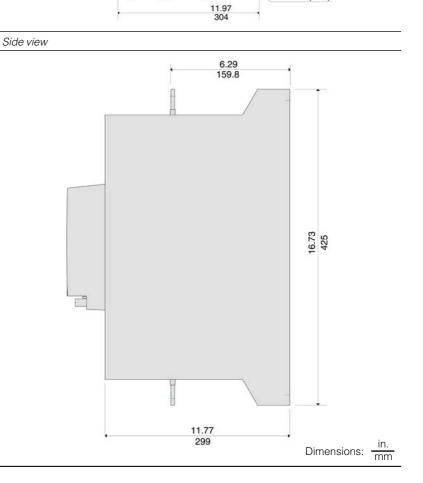

Dimensions


Frame size E

Dimensions

Frame size	ATS22 unit	(W x D x H)					
	A1322 unit	in	mm				
Е	ATS22C48●●●, ATS22C59●●●	11.9 x 13.4 x 17.9	304 x 339.7 x 455				




Front view

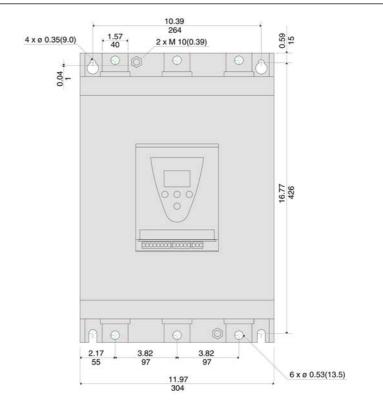



ATS22C48•••... ATS22C59••• Side view

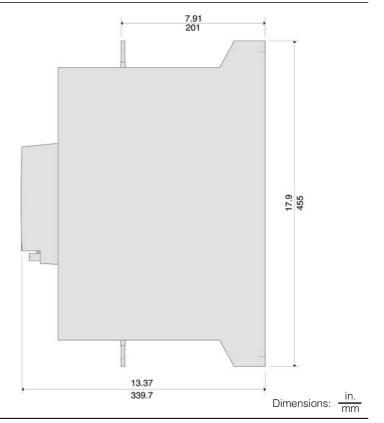

Accessories & Options

Configuration tools



Configuration tools

SoMove setup software

This software enables the user to configure, set, debug and organize maintenance tasks for the Altistart 22. It can also be used to customize the integrated display terminal menus.

Description	Part number	Wei	ght
		lbs	kg
SoMove setup software	Free Download	-	
USB/RJ45 cordset equipped with a USB connector and an RJ45 connector	TCSMCNAM3M002P	0.2	0.1
For connecting a PC to the Altistart 22. Length: 8 ft (2.5 m)			





Altistart 22 iPad app


The iPad application can perform the following programming actions:

- Create parameter files
- Validate soft starter configurations
- Upload, download or clone soft starter settings
- Retain digital file copies of soft starter settings
- Links to product information embedded in app

Description	Part number	Weight	
		lbs	kg
Altistart 22 iPad app	Available for free on iTunes	-	-
30-pin mobile / RS485 with RJ45 connector equipped with a 30-pin mobile connector (iPad side) and an RJ45 connector (Altistart 22 side)	VW3A8151R20U	0.2	0.1
For connecting an iPad to the Altistart 22.			

Accessories & Options

Accessories

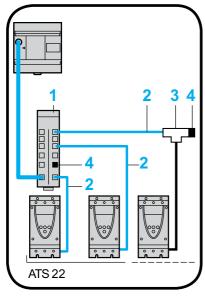

Example of a connection using a Modbus serial link (1) via a splitter box with RJ45 connectors

Configuration tools (continued)

Modbus serial link

Connection via splitter box and RJ45 connectors

Description		Number	Length		Part number	Weight	
			ft	m		lbs	kg
Modbus splitter box with 10 RJ45 connectors		1	-	-	LU9GC3	1.1	0.5
Cordsets for Modbus serial link with 2 RJ45 connectors		2	1	0.3	VW3A8306R03	0.06	0.03
			3	1	VW3A8306R10	0.2	0.1
			10	3	VW3A8306R30	0.22	0.1
Modbus T-junction boxe	es	3	1	0.3	VW3A8306TF03	0.4	0.2
(with integrated cable)			3	1	VW3A8306TF10	0.4	0.2
Line terminators (2)(3)	R = 120 Ω C = 1 nf	4	-	-	VW3A8306RC	0.02	0.01
	R = 120 Ω	4	-	-	VW3A8306R	0.02	0.01

⁽¹⁾ Cable depends on the type of controller or PLC (2) Sold in lots of 2

Remote display terminal

Remote display terminal

This terminal enables the human machine interface of the Altistart 22 to be positioned remotely on the door of a floor-standing enclosure. It has IP 54/NEMA 12 or IP 65 degree of protection depending on the model. Maximum operating temperature is 122 °F (50 °C).

It is used to:

- Set and configure the Altistart 22 remotely
- Display the status and detected faults of the Altistart 22 remotely

Description	Degree of protection	Length		Dimensions		Part number	We	ight
		ft	m	in	mm		lbs	kg
Remote display terminals Remote-mounting cordset	IP 54/ NEMA 12	-	-	2 x 0.6 x 2.8	50 x 15 x 70	VW3G22101	0.7	0.3
required	IP 65	-	-	2.6 x 0.7 x 4.2	66 x 19 x 106	VW3G22102	0.7	0.3
Remote-mounting cordsets	-	3.3	1	-	-	VW3A1104R10	0.2	0.1
equipped with 2 RJ45 connectors	-	9.8	3	-	-	VW3A1104R30	0.4	0.2

⁽³⁾ Depends on the bus architecture

Page Topic

Subheading



VW3G2240•

Accessories

Fans


The ATS22C21 •••... C59 ••• units come with an integrated fan.

The ATS22D17•••...C17••• units are ventilated by means of natural convection.


For more demanding applications, such as those with a greater number of starts, the Altistart 22 range offers fans as an option. These are driven by the soft start - soft stop unit and attached to the back of the device.

The fan's noise level is less than 60 dBA.

Description	Power supply voltage for control	For soft start - soft stop units	Dimen: W x D		Reference	We	ight
	v		in	mm		lbs	kg
Fans	110	ATS22D17S6UD47S6U	5.1 x 1.6 x 10.4	130 x 40 x 265	VW3G22U400	2.6	1.2
		ATS22D62S6UD88S6U	5.7 x 1.6 x 11.6	145 x 40 x 295	VW3G22U401	3.1	1.4
		ATS22C11S6UC17S6U	5.9 x 1.6 x 13.8	150 x 40 x 350	VW3G22U402	3.5	1.6
	220	ATS22D17S6D47S6, ATS22D17QD47Q	5.1 x 1.6 x 10.4	130 x 40 x 265	VW3G22400	2.6	1.2
		ATS22D62S6D88S6, ATS22D62QD88Q	5.7 x 1.6 x 11.6	145 x 40 x 295	VW3G22401	3.1	1.4
		ATS22C11S6C17S6 ATS22C11QC17Q,	5.9 x 1.6 x 13.8	150 x 40 x 350	VW3G22402	3.5	1.6

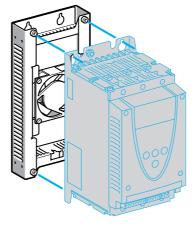

Demonstration of mounting an additional fan to an ATS22 device



Drawing of a protection shroud

Protection shrouds for power terminals

The ATS22C11S6U...C59S6U, ATS22C11S6...C59S6 and ATS22C11Q...C59Q units have 6 unprotected power terminals. These terminals can be fitted with protection shrouds. The protection shrouds are to be used with eyelet connections.

Description	For soft start -	Part number	We	ight
	soft stop units		lbs	kg
Set of 6 power terminal protection shrouds	ATS22C11S6UC17S6U, ATS22C11S6C17S6, ATS22C11QC17Q	LA9F702	0.7	0.3
	ATS22C21S6UC59S6U, ATS22C21S6C59S6, ATS22C21QC59Q	LA9F703 ⁽¹⁾	0.7	0.3

⁽¹⁾ To be used with M10 x 35 mm screws, not supplied.

This page was intentionally left blank.

Introduction



Introduction

The **Enclosed Altistart 22 solid-state combination motor controller** provides a pre-engineered, integrated solution for reduced voltage starting and soft stopping of standard three-phase asynchronous induction motors up to 500 HP at 575 V.

The controllers enclosed in this offer improve your machine's performance and reliability while cutting installation costs by integrating an Altistart 22 soft start - soft stop unit and a circuit breaker disconnect in a stand-alone enclosure.

The Enclosed Altistart 22 controller provides the benefits of reduced current inrush (and resulting voltage sag) and reduced mechanical shocks that can result from starting a motor across the line. A six thyristor (SCR) solid-state power configuration provides smooth acceleration and deceleration control of three-phase asynchronous motors. Control algorithms are integrated to help ensure smooth rotation throughout the starting ramp without mechanical instability at the end of starting. The ATS22 soft starter also features an integral shorting contactor to reduce steady state motor operational losses.

The Enclosed Altistart 22 can even replace traditional low HP starters in commercial/industrial applications.



Applications

The Enclosed Altistart 22 offers many functions that are compatible with these common types of applications found in the construction, infrastructure, or industrial sectors:

- Centrifugal pumps
- Piston pumps
- Fans
- Turbine blowers
- Refrigerant compressors
- Screw compressors
- Centrifugal compressors
- Material handling (conveyors, etc.)
- Specialist machines (agitators, mixers, centrifugal machines)

The compatibility between the Altistart 22 soft starter and these applications are discussed in more detail on pages 4 and 5 of the Altistart 22 section of this catalog.

Introduction



Product

The Enclosed Altistart 22 is offered in 3 different enclosure types; UL Type 1, UL Type 12/12K, and 3R. The horsepower ratings for enclosure UL Types 1 and 12/12K are:

- 3-150 HP @ 208 V
- 5-200 HP @ 230 V
- 10-400 HP @ 460 V
- 15–500 HP @ 575 V

The horsepower ratings for enclosure UL Type 3R are:

- 3–125 HP @ 208 V
- 5-150 HP @ 230 V
- 10–350 HP @ 460 V
- 15-400 HP @ 575 V

The features added by integrating an Enclosed Altistart 22 into your existing system include:

- A low cost and space-saving design with integrated bypass
- Easy start-up
- Integrated controls within the enclosure
- UL listed combination motor controller (UL 508)
- Coordinated short circuit current rating of 100 kA at 480 V and 50 kA at 600 V
- Service entrance rating
- Automatic remote starting

Less wiring, more saving

- Integrated bypass reduces the number of external components: power wiring, contactor, and control wiring for coil
- Wiring six terminals instead of twelve saves time and money
- Integrated bypass contactor decreases heat dissipation, allowing for a smaller enclosure
- Conformal coated printed circuit boards provide enhanced resistance to harsh environments, increasing the service life of your installation and reducing maintenance costs

Improve performance, protect the motor, and reduce down time

- True three-phase control combined with other protection functions allow you to monitor and protect your machine to improve up time
- The soft start and soft stop control reduces mechanical stress on the motor and machine components to increase its productive life:
 - For the motor delivers thermal protection by calculation, with phase loss detection and protection from excessive starts
 - For the machine provides both overload and underload protection and guards against stalled impellers, rotation direction, and excessive acceleration time

Easy communication & programming features

- The integrated keypad display provides access to configuration menus enabling real-time visual feedback
- The "simply start" menu allows you to set up basic parameters to get you up and running quickly
- The multi-function integrated Modbus port allows connection to either:
 - A remote-mount keypad for access outside of the enclosure
 - Connection to a Modbus network for remote communication
 - SoMove™ PC software for configuration and diagnostics



Introduction



Product (continued)

Outside of the enclosure

The enclosure used for the Enclosed Altistart 22 is optimized to enhance functionality and communication while protecting the valuable components inside. It is offered in UL Type 1, 12/12K, or 3R enclosure ratings to ensure the components are protected from harsh environments. The outside of the Enclosed Altistart 22 features:

(1) Remote display terminal

- Mounted on the outside of the enclosure to control the Altistart 22 unit inside
 - 4 x 7 segment display for useful real-time visual feedback
 - 4 button keypad for simple navigation through configuration menus
- (2) Disconnect handle
- (3) Pilot light cluster
- (4) Pushbutton cluster
- (5) Selector switch

Inside of the enclosure

The components featured inside of the Enclosed Altistart 22 work together to offer improved machine performance and protection, simplified integration, and enhanced communication and device programming. These components include:

- (1) Soft starter control fuse
- (2) User terminal block TB1
- (3) A circuit breaker
- (4) Control power transformer
- (5) Control Fuses FU6, FU7, and FU8
- (6) Altistart 22 soft-start/soft-stop unit
- (7) Space for field-mounted control option
- (8) Service entrance lug (Z10)
- (9) Ground bar



Specifications

Environmental

Environmental specifications

Storage temperature	-13 to 158 °F (-25 to 70 °C)	
O	UL Type 1 and Type 12/12K: 14 to 104 °F (-10 to 40 °C)	
Operating Temperature	UL Type 3R and Mod X10: 14 to 122 °F (-10 to 50 °C)	
Humidity 95% with no condensation or dripping water, conforming to IEC 60068-2-3		
Altitude 3280 ft. (1000 m), derated by 2.2% for each additional 328 ft. (100 m) up to 6560 ft. (2 maximum		
	UL Type 1: General Purpose	
Enclosure	UL Type 12/12K: Industrial Use, dust-tight/drip-tight	
	UL Type 3R: Outdoor Use	
Pollution Degree Pollution Degree 2 (UL Type 1 and Type 3R) and pollution degree 3 (UL Type 1 NEMA ICS-1 and IEC 60664-1		
Resistance to Vibration (Soft Starter Only) According to IEC 60068-2-6: 1.5 mm peak to peak from 3 to 13 Hz 1 gn from 13 to 150 Hz		
Resistance to Shocks	According to IEC 60068-2	
Codes and Standards	UL Listed per UL 508 under category NKJH Conforms to applicable NEMA ICS, NFPA, and IEC standards Manufactured under ISO 9001 standards Factory modification E10 provides Canadian cUL certification per C22.2 No.14. Seismic Certification: 2003 IBC, NFPA 5000, and ASCE7 ICC ES AC 156 (1)	

⁽¹⁾ Acceptance criteria test protocol with an importance factor of 1.5.

Specifications

Electrical

Electrical specifications

Supply Voltage	208 V ac -15%/+10%; 230 V ac -15%/+10%; 460 V ac -15%/+10%; 575 V ac -15%/+10%		
Control Voltage	115 V ac -15%/+10% (control power transformer included)		
Frequency	50/60 Hz +/- 5%		
Rated Current	Full load current (FLA) per NFPA 70 / NEC Table 430-250		
Motor Power	Type 1 and Type 12/12K: 3–150 hp @ 208 V 5–200 hp @ 230 V 10–400 hp @ 460 V 15–500 hp @ 575 V Type 3R or 122 °F (50 °C) Rated: 3–125 hp @ 208 V 5–150 hp @ 230 V 10–350 hp @ 460 V 15–400 hp @ 460 V		
Motor Voltage	208, 230, 460, 575 V		
	S1: Starting at 350% of In (1) for 40 s from a cold state		
Starting Duty (Standard Duty)	S3: Starting at 300% of In ⁽¹⁾ for 20 s, or 200% of In for 40 s, with a load factor of 95% and 3 starts per hour, or an equivalent thermal cycling		

⁽¹⁾ In is the controller full load current listed on the nameplate.

Specifications

Operation & Protection

Operation specifications

Methods of Starting				
Torque Ramp	Adjustable from 1 to 60 s by keypad			
Current Limitation	Adjustable from 150% to 350% of controller rated current (In) as indicated on nameplate			
Booster Start-up Pulse	Pulse start at 80% of full voltage for 0.1 to 1 s (bSt) for breaking free high-friction loads or starting 2-pole motors			
Methods of Stopping				
Freewheel	Coast to stop on stop command			
Torque Deceleration Ramp	Adjustable from 1 to 60 s by keypad			
Status and Diagnostics:	Digital display of motor and controller status, including: ■ Ready/Run ■ Motor Current			

Protection specifications

	Motor
Thermal Overload	Solid-state thermal overload relay, integral to the ATS22 soft starter. Overload class is selectable as 10, 20, or 30 by keypad. Range is 40% to 100% of ATS22 soft starter rated current. (1)
Shunt-Trip Disconnect	Removes power from the controller cabinet when the ATS22 soft starter detects a fault condition
	Controller
Short-Circuit Current Ratings	 PowerPact H, J, D, L, or P Circuit Breaker: 100 kA @ 480 V and 50 kA @ 600 V (2) PowerPact M Circuit Breaker: 65 kA @ 480 V and 25 kA @ 600 V Fusible Disconnect: 100 kA @ 600 V (requires UL Class J time-delay fuses, not included).
Overcurrent Protection	An overcurrent protection device (OCPD) provides Type 1 coordination to the short-circuit current ratings.
Overtemperature Protection	Protection if heatsink temperature exceeds 185 °F (85 °C)
Shorting Contactor	A shorting contactor is integral to the ATS22 soft starter and reduces temperature rise in the enclosure by eliminating the watts loss of the SCRs.
Unbalanced Threshold Current	Programmable, 10% to 100% of soft starter rated current (In)
Ground Fault	Programmable, 10% to 100% of soft starter rated current (In)
Undervoltage/Overvoltage	Programmable, undervoltage trip at 50% to 90% of line voltage (ULn), and overvoltage trip at 110% to 125% of line voltage

⁽¹⁾ Refer to the ATS22 User Manual for ATS22 soft starter maximum rated current. It may differ from the ratings of the Enclosed ATS22 controller. (2) Short-circuit rating for power circuits N05, R05, and Y05 with an IEC contactor is 35,000 A @ 600 V for the following horsepower ratings: 350 hp: Type 1 and 12 300 hp: Type 3R or Mod X10



Selection Table

UL Type 1 & Type 12/12K

8639 22U C G 4 B A06 A07 B08 A10

- 1 2 3 4 5 6 7 8 9

Class

- Controller class

8638 = Fusible disconnect

8639 = Circuit breaker disconnect

Type

1 Controller style

22F = Altistart 22 with Molded Case Switch and Class J Fuse Block

22T = Altistart 22 with PowerPact Motor Circuit Protector

22U = Altistart 22 with PowerPact Thermal-magnetic Circuit Breaker

2 Horsepower rating

A = 3 hp	H = 30 hp	Q = 150 hp
B = 5 hp	J = 40 hp	R = 200 hp
C = 7.5 hp	K = 50 hp	S = 250 hp
D = 10 hp	L = 60 hp	T = 300 hp
E = 15 hp	M = 75 hp	U = 350 hp
F = 20 hp	N = 100 hp	W = 400 hp
G = 25 hp	P = 125 hp	X = 500 hp

3 Enclosure type

G = UL Type 1 general purpose

A = UL Type 12K industrial use, dust/drip tight

H = UL Type 3R outdoor use

Voltage

4 2 = 208 V ac **4** = 460 V ac **5** = 575 V ac

Mods

5 Power circuit options

B = Basic shunt trip

S = Full-featured shunt trip

N = Non-reversing isolation

R = Reversing isolation

Y = Integral full-voltage bypass

6 Control options

A06 = Start-stop pushbuttons

B06 = Forward-off-reverse

C06 = Hand-off-auto (HOA) selector switch

D06 = Stop-run selector switch

E06 = Hand-auto selector switch/

start-stop pushbuttons

7 Pilot device options

A07 = Run light (red), off light (green)

B07 = Push-to-test run light (red),

push to-test off light (green)

C07 = Run light (red), off light (green),

tripped light/reset (yellow)

D07 = PTT run light (red), PTT off light (green), tripped light/reset (yellow)

8 Metering options

B08 = Elapsed run time meter

9 Miscellaneous options

* The complete list of Miscellaneous options is located on pages 32 & 33.

UL Type 1 and Type 12/12K enclosures

Standard duty ratings

Input				Maximum Total	
Voltage 60 Hz	Rating	Enclosed 22 Catalog	Current	Dissipated Power at Rated Load (4,5)	Altistart 22 Catalog Number
V ac	HP	Number (1, 2, 3)	A	w	,g
	3	22♦А●2■	10.6	65.7	ATS22D17S6U
	5	22♦B●2■	16.7	71.8	ATS22D32S6U
	7.5	22♦С●2■	24.2	75	ATS22D32S6U
	10	22 ♦ D ● 2 ■	30.8	81.8	ATS22D47S6U
	15	22 ♦ E ● 2 ■	46.2	95.4	ATS22D62S6U
	20	22♦F●2■	59.4	106.7	ATS22D75S6U
	25	22♦G●2∎	74.8	112	ATS22D88S6U
208 V	30	22♦Н●2■	88	149	ATS22C11S6U
	40	22♦Ј⊕2∎	114	182.8	ATS22C14S6U
	50	22♦K●2■	143	221.3	ATS22C17S6U
	60	22+L●2■	169	252.6	ATS22C21S6U
	75	22♦М●2■	211	307.1	ATS22C25S6U
	100	22 ♦N ●2 ■	273	418.3	ATS22C32S6U
	125	22♦P●2■	343	533	ATS22C41S6U
	150	22 ♦ Q ● 2 ■	395	563	ATS22C48S6U
	5	22 ♦ B●3 ≡	15.2	66.5	ATS22D17S6U
	7.5	22♦С●3■	22	74.2	ATS22D32S6U
	10	22 ♦ D●3 ≡	28	76.5	ATS22D32S6U
	15	22 ♦ E●3■	42	94	ATS22D47S6U
	20	22 ♦ F●3■	54	101.4	ATS22D62S6U
	25	22 ♦G ●3∎	68	112.8	ATS22D75S6U
	30	22♦H●3■	80	115.6	ATS22D88S6U
230 V	40	22♦Ј⊕3≡	104	163.7	ATS22C11S6U
	50	22♦K●3■	130	199.9	ATS22C14S6U
	60	22 + L●3■	154	232.9	ATS22C17S6U
	75	22 ♦M ●3 ≡	192	273.1	ATS22C21S6U
	100	22♦N●3 ≡	248	354.4	ATS22C25S6U
	125	22♦P●3■	312	481.6	ATS22C32S6U
	150	22 ♦Q ●3∎	360	562.3	ATS22C41S6U
	200	22♦R●3■	480	691.3	ATS22C59S6U
(1) ♦ may be F. T or U. describing the controller style. See Table 2 on page 32.					

⁽¹⁾ lacktriangledown may be F, T or U, describing the controller style. See Table 2 on page 32.

^{(2) •} may be G or A, describing the enclosure type. See Table 2 on page 32.

^{(3) ■} may be B, S, N, R, or Y describing the power circuit configuration.
(4) Dissipated power does not include losses of the customer-supplied power fuses.

⁽⁵⁾ For btu/hr, multiply the values by 3.413.

Selection Table

UL Type 1 & Type 12/12K

8639 22U C G 4 B A06 A07 B08 A10

Class

Controller class

8638 = Fusible disconnect

8639 = Circuit breaker disconnect

Type

1 Controller style

22F = Altistart 22 with Molded Case Switch and Class J Fuse Block

22T = Altistart 22 with PowerPact Motor Circuit Protector

22U = Altistart 22 with PowerPact Thermal-magnetic Circuit Breaker

2 Horsepower rating

A = 3 hp	H = 30 hp	Q = 150 hp
B = 5 hp	J = 40 hp	R = 200 hp
C = 7.5 hp	K = 50 hp	S = 250 hp
D = 10 hp	L = 60 hp	T = 300 hp
E = 15 hp	M = 75 hp	U = 350 hp
F = 20 hp	N = 100 hp	W = 400 hp
G = 25 hp	P = 125 hp	X = 500 hp

3 Enclosure type

G = UL Type 1 general purpose

A = UL Type 12K industrial use, dust/drip tight

H = UL Type 3R outdoor use

Voltage

4 2 = 208 V ac 4 = 460 V ac**3** = 230 V ac **5** = 575 V ac

Mods

5 Power circuit options

B = Basic shunt trip

S = Full-featured shunt trip

N = Non-reversing isolation

R = Reversing isolation

Y = Integral full-voltage bypass

6 Control options

A06 = Start-stop pushbuttons

B06 = Forward-off-reverse

C06 = Hand-off-auto (HOA) selector switch

D06 = Stop-run selector switch

E06 = Hand-auto selector switch/ start-stop pushbuttons

7 Pilot device options

A07 = Run light (red), off light (green)

B07 = Push-to-test run light (red), push to-test off light (green)

C07 = Run light (red), off light (green), tripped light/reset (yellow)

D07 = PTT run light (red), PTT off light (green), tripped light/reset (yellow)

8 Metering options

B08 = Elapsed run time meter

9 Miscellaneous options

* The complete list of Miscellaneous options is located on pages 32 & 33.

UL Type 1 and Type 12/12K enclosures

Standard duty ratings

Standard duty ratings					
Input Voltage 60 Hz V ac	Horsepower Rating	Enclosed 22 Catalog Number (1, 2, 3)	Full Load Current	Maximum Total Dissipated Power at Rated Load (4,5) W	Altistart 22 Catalog Number
	10	22 ♦ D●4■	14	81.2	ATS22D17S6U
	15	22 ♦ E ● 4 ■	21	88.5	ATS22D32S6U
	20	22♦F●4■	27	91.6	ATS22D32S6U
	25	22♦G●4■	34	98.7	ATS22D47S6U
	30	22♦Н●4■	40	107.2	ATS22D47S6U
	40	22♦Ј●4∎	52	121.1	ATS22D62S6U
	50	22♦K●4■	65	132	ATS22D75S6U
	60	22♦L●4■	77	134.9	ATS22D88S6U
460 V	75	22♦М●4■	96	176.8	ATS22C11S6U
	100	22♦N●4■	124	214.6	ATS22C14S6U
	125	22♦P●4■	156	256.1	ATS22C17S6U
	150	22 ♦ Q●4∎	180	263.6	ATS22C21S6U
	200	22♦R●4■	240	343.5	ATS22C25S6U
	250	22♦Ѕ●4■	302	464.5	ATS22C32S6U
	300	22♦T●4■	361	564.1	ATS22C41S6U
	350	22 ♦U ●4■	414	589.6	ATS22C48S6U
	400	22♦∀●4■	477	686.6	ATS22C59S6U
	15	22 ♦ E●5■	17	82	ATS22D17S6U
	20	22♦F●5■	22	88.6	ATS22D32S6U
	25	22♦G●5 ■	27	90.7	ATS22D32S6U
	30	22♦H●5■	32	96.8	ATS22D47S6U
	40	22♦Ј●5■	41	106.7	ATS22D47S6U
	50	22♦K⊕5∎	52	119.3	ATS22D62S6U
	60	22+L●5■	62	127.4	ATS22D75S6U
575 V	75	22♦M●5■	77	134.9	ATS22D88S6U
5/5 V	100	22♦N●5■	99	179.4	ATS22C11S6U
	125	22 ♦ P●5■	125	215.7	ATS22C14S6U
	150	22 ♦ Q●5■	144	243.3	ATS22C17S6U
	200	22♦R●5■	192	273.1	ATS22C21S6U
	250	22♦Ѕ●5■	242	346.2	ATS22C25S6U
	300	22♦Тө5∎	289	443.2	ATS22C32S6U
	400	22♦W●5■	382	543.1	ATS22C48S6U
	500	22♦X●5■	472	678.8	ATS22C59S6U
(1) . mai ba	C Tarll dagarib	ing the centraller etu	la Caa Tabla O	on nogo 22	

^{(1) ♦} may be F, T or U, describing the controller style. See Table 2 on page 32. (2) • may be G or A, describing the enclosure type. See Table 2 on page 32.

^{(3) ■} may be B, S, N, R, or Y describing the power circuit configuration.

⁽⁴⁾ Dissipated power does not include losses of the customer-supplied power fuses (5) For btu/hr, multiply the values by 3.413.

Selection Table

UL Type 3R

8639 22U C G 4 B A06 A07 B08 A10

Class

Controller class

8638 = Fusible disconnect

8639 = Circuit breaker disconnect

Type

1 Controller style

22F = Altistart 22 with Molded Case Switch and Class J Fuse Block

22T = Altistart 22 with PowerPact Motor Circuit Protector

22U = Altistart 22 with PowerPact Thermal-magnetic Circuit Breaker

2 Horsepower rating

A = 3 hpH = 30 hpQ = 150 hpB = 5 hpJ = 40 hpR = 200 hpC = 7.5 hpK = 50 hpS = 250 hpD = 10 hpL = 60 hpT = 300 hpM = 75 hpU = 350 hpE = 15 hpF = 20 hpN = 100 hpW = 400 hpG = 25 hpP = 125 hpX = 500 hp

3 Enclosure type

G = UL Type 1 general purpose

A = UL Type 12K industrial use, dust/drip tight

H = UL Type 3R outdoor use

Voltage

4 2 = 208 V ac 4 = 460 V ac**3** = 230 V ac 5 = 575 V ac

Mods

5 Power circuit options

B = Basic shunt trip

S = Full-featured shunt trip

N = Non-reversing isolation

R = Reversing isolation

Y = Integral full-voltage bypass

6 Control options

A06 = Start-stop pushbuttons

B06 = Forward-off-reverse

C06 = Hand-off-auto (HOA) selector switch

D06 = Stop-run selector switch

E06 = Hand-auto selector switch/

start-stop pushbuttons

7 Pilot device options

A07 = Run light (red), off light (green)

B07 = Push-to-test run light (red),

push to-test off light (green)

C07 = Run light (red), off light (green), tripped light/reset (yellow)

D07 = PTT run light (red), PTT off light (green), tripped light/reset (yellow)

8 Metering options

B08 = Elapsed run time meter

9 Miscellaneous options

* The complete list of Miscellaneous options is located on pages 32 & 33.

UL Type 3R and 122 °F (50 °C) rated enclosures

Ctondovd	4	
Standard	autv	ratings

	Standard duty ratings				
Input Voltage 60 Hz	Horsepower Rating	Enclosed 22 Catalog Number (1, 2, 3)	Full Load Current	Maximum Total Dissipated Power at Rated Load (4,5)	Altistart 22 Catalog Number
V ac	HP	Number	Α	w	
	3	22♦А⊕2∎	10.6	50.4	ATS22D17S6U
	5	22♦В●2■	16.7	53.3	ATS22D32S6U
	7.5	22♦С●2■	24.2	60.1	ATS22D47S6U
	10	22 ♦D ●2 ■	30.8	70.2	ATS22D47S6U
	15	22 ♦ E ● 2■	46.2	74	ATS22D75S6U
	20	22♦F●2■	59.4	83.2	ATS22D88S6U
208 V	25	22♦G●2■	74.8	118.5	ATS22C11S6U
200 V	30	22♦Н●2■	88	140.3	ATS22C14S6U
	40	22♦J●2■	114	164.1	ATS22C17S6U
	50	22♦K●2■	143	197.8	ATS22C21S6U
	60	22♦L●2■	169	236.3	ATS22C25S6U
	75	22♦М●2■	211	297.8	ATS22C32S6U
	100	22♦№2■	273	376.1	ATS22C41S6U
	125	22♦P●2■	343	434.8	ATS22C48S6U
	5	22 ♦B ●3 ≡	15.2	55.1	ATS22D32S6U
	7.5	22♦С●3■	22	57.5	ATS22D32S6U
	10	22 ♦ D●3 ≡	28	68.8	ATS22D47S6U
	15	22 ♦ E●3■	42	69.7	ATS22D62S6U
	20	22 ♦ F●3■	54	85.3	ATS22D75S6U
	25	22 ♦G ●3■	68	89.1	ATS22D88S6U
230 V	30	22♦H●3■	80	127.4	ATS22C11S6U
230 V	40	22♦Ј●3■	104	145.5	ATS22C14S6U
	50	22♦K●3■	130	181.2	ATS22C17S6U
	60	22+L●3 ≡	154	213.4	ATS22C21S6U
	75	22♦М●3■	192	250.7	ATS22C25S6U
	100	22♦N●3■	248	338.9	ATS22C32S6U
	125	22♦P●3■	312	438.1	ATS22C41S6U
	150	22 ♦Q ●3 ≡	360	506.6	ATS22C59S6U
(1) A may be E T at II describing the controller at II Con Table 2 on page 22					

^{(1) •} may be F, T or U, describing the controller style. See Table 2 on page 32.
(2) • may be G or A, describing the enclosure type. See Table 2 on page 32.
(3) ■ may be B, S, N, R, or Y describing the power circuit configuration.

⁽⁴⁾ Dissipated power does not include losses of the customer-supplied power fuses. (5) For btu/hr, multiply the values by 3.413.

Selection Table

UL Type 3R

8639 22U C G 4 B A06 A07 B08 A10

Class

Controller class

8638 = Fusible disconnect

8639 = Circuit breaker disconnect

Type

1 Controller style

22F = Altistart 22 with Molded Case Switch and Class J Fuse Block

22T = Altistart 22 with PowerPact Motor Circuit Protector

22U = Altistart 22 with PowerPact Thermal-magnetic Circuit Breaker

2 Horsepower rating

A = 3 hp	H = 30 hp	Q = 150 hp
B = 5 hp	J = 40 hp	R = 200 hp
C = 7.5 hp	K = 50 hp	S = 250 hp
D = 10 hp	L = 60 hp	T = 300 hp
E = 15 hp	M = 75 hp	U = 350 hp
F = 20 hp	N = 100 hp	W = 400 hp
G = 25 hp	P = 125 hp	X = 500 hp

3 Enclosure type

G = UL Type 1 general purpose

A = UL Type 12K industrial use, dust/drip tight

H = UL Type 3R outdoor use

Voltage

4 2 = 208 V ac	4 = 460 V ac
3 = 230 V ac	5 = 575 V ac

5 Power circuit options

B = Basic shunt trip

S = Full-featured shunt trip

N = Non-reversing isolation

R = Reversing isolation

Y = Integral full-voltage bypass

6 Control options

A06 = Start-stop pushbuttons

B06 = Forward-off-reverse

C06 = Hand-off-auto (HOA) selector switch

D06 = Stop-run selector switch

E06 = Hand-auto selector switch/ start-stop pushbuttons

7 Pilot device options

A07 = Run light (red), off light (green)

B07 = Push-to-test run light (red), push to-test off light (green)

C07 = Run light (red), off light (green), tripped light/reset (yellow)

D07 = PTT run light (red), PTT off light (green), tripped light/reset (yellow)

8 Metering options

B08 = Elapsed run time meter

9 Miscellaneous options

* The complete list of Miscellaneous options is located on pages 32 & 33.

UL Type 3R and 122 °F (50 °C) rated enclosures

Standard duty ratings

Otandard daty ratings					
Input Voltage 60 Hz	Horsepower Rating	Enclosed 22 Catalog Number (1, 2, 3)	Full Load Current	Maximum Total Dissipated Power at Rated Load (4,5)	Altistart 22 Catalog Number
V ac	HP		A	W	
	10	22♦D●4■	14	60.4	ATS22D32S6U
	15	22 ♦ E●4■	21	63.5	ATS22D32S6U
	20	22♦F●4■	27	75.3	ATS22D47S6U
	25	22♦G●4∎	34	83.3	ATS22D47S6U
	30	22♦H●4■	40	95.1	ATS22D62S6U
	40	22 ♦J ●4 ■	52	96.6	ATS22D75S6U
	50	22♦K●4■	65	101.9	ATS22D88S6U
460 V	60	22♦L●4■	77	139.9	ATS22C11S6U
400 V	75	22♦M●4 ≡	96	155.9	ATS22C14S6U
	100	22♦N●4 ■	124	170.4	ATS22C17S6U
	125	22♦P●4 ■	156	208.6	ATS22C21S6U
	150	22♦Q●4 ■	180	251.3	ATS22C25S6U
	200	22♦R●4■	240	322.8	ATS22C32S6U
	250	22♦Ѕ●4■	302	422.9	ATS22C41S6U
	300	22 ♦ T●4■	361	471.4	ATS22C48S6U
	350	22 ♦U ●4∎	414	557.3	ATS22C59S6U
	15	22♦E●5■	17	68.3	ATS22D32S6U
	20	22♦F●5■	22	70.2	ATS22D32S6U
	25	22♦G●5 ≡	27	77.7	ATS22D47S6U
	30	22♦H●5■	32	84.9	ATS22D47S6U
	40	22♦Ј●5■	41	89.4	ATS22D62S6U
	50	22♦K●5■	52	96.8	ATS22D75S6U
	60	22 ♦L ●5■	62	104.5	ATS22D88S6U
575 V	75	22♦M●5 ■	77	135.1	ATS22C11S6U
	100	22♦N●5 ≡	99	155.2	ATS22C14S6U
	125	22♦P●5■	125	173.4	ATS22C17S6U
	150	22 ♦ Q●5 ≡	144	209.5	ATS22C21S6U
	200	22♦R●5■	192	240.9	ATS22C25S6U
	250	22 ♦S ●5■	242	335	ATS22C32S6U
	300	22♦Тө5∎	289	447.7	ATS22C48S6U
	400	22 ♦ W●5∎	382	541.8	ATS22C59S6U
(1) ♦ may be	F Tor II describ	ing the controller sty	le See Table 2	on nage 32	

^{(1) ◆} may be F, T or U, describing the controller style. See Table 2 on page 32.
(2) ● may be G or A, describing the enclosure type. See Table 2 on page 32.
(3) ■ may be B, S, N, R, or Y describing the power circuit configuration.

⁽⁴⁾ Dissipated power does not include losses of the customer-supplied power fuses. (5) For btu/hr, multiply the values by 3.413.

Options

8639 22U C G 4 B A06 A07 B08 A10

- 1 2 3 4 5 6 7 8 9

Class

Controller class

8638 = Fusible disconnect

8639 = Circuit breaker disconnect

Type

1 Controller style

22F = Altistart 22 with Molded Case Switch and Class J Fuse Block

22T = Altistart 22 with PowerPact Motor Circuit Protector

22U = Altistart 22 with PowerPact
Thermal-magnetic Circuit Breaker

2 Horsepower rating

A = 3 hp	H = 30 hp	Q = 150 hp
B = 5 hp	J = 40 hp	R = 200 hp
C = 7.5 hp	K = 50 hp	S = 250 hp
D = 10 hp	L = 60 hp	T = 300 hp
E = 15 hp	M = 75 hp	U = 350 hp
F = 20 hp	N = 100 hp	W = 400 hp
G = 25 hp	P = 125 hp	X = 500 hp

3 Enclosure type

G = UL Type 1 general purpose

A = UL Type 12K industrial use, dust/drip tight

H = UL Type 3R outdoor use

Voltage

4 2 = 208 V ac 4 = 460 V ac 3 = 230 V ac 5 = 575 V ac

Mods

5 Power circuit options

B = Basic shunt trip

S = Full-featured shunt trip

N = Non-reversing isolation

R = Reversing isolation

Y = Integral full-voltage bypass

6 Control options

A06 = Start-stop pushbuttons

B06 = Forward-off-reverse

C06 = Hand-off-auto (HOA) selector switch

D06 = Stop-run selector switch

E06 = Hand-auto selector switch/ start-stop pushbuttons

7 Pilot device options

A07 = Run light (red), off light (green)

B07 = Push-to-test run light (red),

push to-test off light (green)

C07 = Run light (red), off light (green), tripped light/reset (yellow)

D07 = PTT run light (red), PTT off light (green), tripped light/reset (yellow)

8 Metering options

B08 = Elapsed run time meter

9 Miscellaneous options

* The complete list of Miscellaneous options is located on pages 32 & 33.

Control options

	I and the second
406	Start/Stop push buttons
A06	Provides black start and red stop push buttons (3-wire control scheme).
B06	Forward-Off-Reverse selector switch
	Provides three-position selector switch to select between forward, off and reverse. Uses 2-wire control.
000	Hand-Off-Auto selector switch
C06	Provides a three-position selector switch, 2-wire control scheme.
D06	Stop-Run selector switch
	Provides a two-position selector switch.
	Hand-Auto selector switch and Start/Stop push buttons
E06	Provides a two-position selector switch and start/stop push buttons (3-wire control).

Pilot light cluster options

	Pilot light cluster #1
A07	Consists of red "RUN" and green "OFF" pilot lights. Provides standard red "RUN (ON)" and green "OFF" pilot lights for status annunciation.
	Pilot light cluster #2
B07	Consists of red "RUN" (push-to-test) and green "OFF" (push-totest) pilot lights. Provides push-to-test type red "RUN (ON)" and standard green "OFF" pilot lights for status annunciation.
	Pilot light cluster #3
C07	Consists of red "RUN", green "OFF" and yellow "FAULT" pilot lights. Provides standard red "RUN (ON)" green "OFF" and yellow "FAULT" pilot lights for status annunciation.
	Pilot light cluster #4
D07	Consists of red "RUN (ON)" (push-to-test), green "OFF" (push-to-test) and yellow "FAULT" (push-to-reset) pilot lights. Provides push-to-test type red "RUN (ON)" standard green "OFF", and push-to-reset type yellow "FAULT" for status annunciation.

Meter display options

	Elapsed time meter	
	Provides a seven-digit analog, non-resettable elapsed run time meter. Not available on Type 3R Enclosures	

Miscellaneous options

	Floor mounting kit
Mod A10	Only available for size D enclosures.
Alo	Rule: Available for power options S05, N05, R05, Y05.
B10	150 VA additional control power capacity
B10	Provides 150 VA additional control VA capacity for customer use.
	Power up on delay (start relay)
C10	Provides an electronic time delay relay adjustable from 0.1 to 60 seconds. Relay is pre-wired to inhibit start for users to set delay time upon power-up of control.
D40	Emergency stop push button
D10	Provides a push-button for immediate removal of power.
	"cUL" label
E10	Provides a Canadian Underwriters Laboratories label when required by local code requirements.

*Miscellaneous options continued on next page



Options

Miscellaneous options (continued)

Auxiliary contacts for run mode

8639 22U C G 4 B A06 A07 B08 A10

- 1 2 3 4 5 6 7 8 9

Class

Controller class

8638 = Fusible disconnect

8639 = Circuit breaker disconnect

Type

1 Controller style

22F = Altistart 22 with Molded Case Switch and Class J Fuse Block

22T = Altistart 22 with PowerPact Motor Circuit Protector

22U = Altistart 22 with PowerPact
Thermal-magnetic Circuit Breaker

2 Horsepower rating

A = 3 hp	H = 30 hp	Q = 150 hp
B = 5 hp	J = 40 hp	R = 200 hp
C = 7.5 hp	K = 50 hp	S = 250 hp
D = 10 hp	L = 60 hp	T = 300 hp
E = 15 hp	M = 75 hp	U = 350 hp
F = 20 hp	N = 100 hp	W = 400 hp
G = 25 hp	P = 125 hp	X = 500 hp

3 Enclosure type

G = UL Type 1 general purpose

A = UL Type 12K industrial use, dust/drip tight

H = UL Type 3R outdoor use

Voltage

4 2 = 208 V ac	4 = 460 V ac
3 = 230 V ac	5 = 575 V ac

Mods

5 Power circuit options

B = Basic shunt trip

S = Full-featured shunt trip

N = Non-reversing isolation

R = Reversing isolation

Y = Integral full-voltage bypass

6 Control options

A06 = Start-stop pushbuttons

B06 = Forward-off-reverse

C06 = Hand-off-auto (HOA) selector switch

D06 = Stop-run selector switch

E06 = Hand-auto selector switch/ start-stop pushbuttons

7 Pilot device options

A07 = Run light (red), off light (green)

B07 = Push-to-test run light (red), push to-test off light (green)

C07 = Run light (red), off light (green), tripped light/reset (yellow)

D07 = PTT run light (red), PTT off light (green), tripped light/reset (yellow)

8 Metering options

B08 = Elapsed run time meter

9 Miscellaneous options

* The complete list of Miscellaneous options is located on pages 32 & 33.

	Auxiliary contacts for run mode
F10	Provides one Form A, normally open (N.O.) contact rated 5 A at 120 Vac to the terminal blocks for customer use. The contact closes when the controller is applying power to the motor.
	Auxiliary contacts for full voltage bypass run mode
G10	Provides 1 Form C contact rated 5 A @ 120 Vac (8501 Type R relay or equivalent) wired to terminal blocks for customer use. Contacts change state when motor is operated across the line with full voltage by bypass starter.
	Rule: Must use Power Circuit N or R (line isolation) contactor combination.
	Auxiliary contacts for auto mode
H10	Provides one Form A, normally open (N.O.) contact rated 5 A @120 Vac to the terminal blocks for user use. The contact closes when the controller is placed in Auto (remote) mode.
	Rule: MOD C06 (Hand-Off-Auto selector switch) or E06 (Hand-Auto selector switch) must be specified.
	Auxiliary contacts for trip status
J10	Provides one Form A, normally open (N.O.) contact rated 5 A @120 Vac to the terminal blocks for user use. The contact closes when the controller has tripped.
	ID engraved nameplates
L10	Provides a lamacoid nameplate, engraved with equipment designation.
M10	Spare terminal blocks
	Provides up to 10 spare terminal blocks unwired for customer use. Since Phoenix style terminal blocks will be used, extra terminal points will be provided as standard 20 terminal points are available as standard for control wiring (including any additional customer spare terminal points).
P10	Permanent wire markers
PIU	Provides a permanent sleeve type wire marker on control wiring assemblies
	MOV/Surge arrestor (custom engineered option)
R10	Provides supplementary MOV protection using a Class 6671 SDSA3650 Surgebreaker Secondary Surge Arrester hardwired and factory mounted.
	Omit door mounted keypad display
U10	Omits the door-mounted keypad display. A keypad closing plate and gasket are provided on the door.
	Rule: To program or control the ATS22 soft starter with Modbus communication, refer to the ATS22 User Manual, BBV51330.
	Seismic qualification label
Y10	Provides a self-certified identification label with compliance to 2000 IBC, NFPA 5000, 2001 CBC, 1997 UBC, 1999 NBC, 1999SBC, ASCE-7 02 seismic qualification certification. The label criteria will be uniform for the enclosed

products. Enclosures shall contain additional bracing as defined by the seismic

This option provides special labels and documents to comply with the seismic

requirements of the California Office of Statewide Planning and Development

(OSHPD). Refer to 30072-454-87, Seismic Qualification of Enclosed Drives and

Provides a UL869A approved insulated ground neutral lug assembly, mounting bracket with bonded enclosure ground wire suitable for use as service entrance

Rule: Service Entrance Rating is not available with the Mod E10 (cUL Label).

qualification certification criteria.

OSHPD Seismic Certification

Service Entrance Rating

equipment.

Soft Starters, for additional information.

Rule: Not available for wall mounted enclosures.

V10

Z10



Quality Assurance Procedures



Quality Assurance Procedures

This document provides information regarding the quality assurance processes and procedures that are in place for the manufacturing of Altistart 22 (ATS22) soft-start/soft-stop units. Schneider Electric utilizes quality assurance processes and procedures to verify the integrity of components and the assembly process. This document provides a summary of these processes and procedures.



Outline of Test Process and Procedures

Data is gathered on each unit and tracked via the unique serial number of each unit. Test during production validates all electrical and software parameters. Final verification sample testing is conducted at various points in the manufacturing process for each soft starter. Test sampling size is 1 commercial reference per size per week.

In addition to the processes and procedures detailed above, the ISO certified manufacturing facility test stations have instructions for visual quality checks and electrical inspection. The visual quality check list includes a physical inspection for proper connections, proper assembly torques, mechanical integrity and proper documentation.

The quality assurance procedures detailed above are in place for the manufacturing of Altistart 22. These procedures are established to monitor and confirm the quality of the product line that has been designed in from the outset.

- ✓ Individual unit data tracked by unique serial number
- ☑ Electrical parameters
- ☑ Software parameters
- ☑ Final verification sample testing
- ☑ ISO certified visual quality checks
 - ☑ Proper connections
 - ☑ Proper assembly torques
 - ☑ Mechanical integrity
 - ☑ Proper documentation

This page was intentionally left blank.



Solutions for every stage of your equipment's life cycle

Schneider Electric™ provides services far beyond meeting your immediate needs for application or equipment repair. We take a long-term, holistic approach to determine your facility and operational needs and develop a strategy for improving the performance of your people, systems, and processes.

Schneider Electric provides services from system design and consulting, to maintenance support, modernization of your installation, and project delivery. Schneider Electric provides the people, tools, and processes to help maximize your business's infrastructure.

Our expertise enables you to cut costs, reduce energy consumption, and keep your systems up and running through routine maintenance, added enhancements, and migrations to new state-of-the-art functionality.

> Start-up and commissioning

Expert installation support to provide assistance in the start-up of your new system. Service includes a comprehensive power-up and diagnostic check on system components to minimize risk and optimize operation.

> Technical training

Training offered on-site, off-site, or online for Schneider Electric automation products taught by professional instructors with up-to-date knowledge of our latest hardware and software.

> Remote technical support

Comprehensive online and phone support from experts specially trained on Schneider Electric drive products, helping to reduce downtime and costs and optimize your system's life cycle.

> On-site technical support

Support service to perform regular maintenance, upgrades, and conversion assistance, small application and programming assistance, on-the-job training, equipment repair, support and troubleshooting, even in emergency situations.

> Preventative maintenance

Maintenance programs to scan for, and proactively detect, potential issues or problems with your automation system to help you avoid the costs of unscheduled downtime and short equipment service life. Also serves to extend the life of your installed base by using our services to properly maintain your equipment.

> Industrial repair services

Repair capabilities for over 400,000 part numbers from more than 2,500 manufacturers at our Greensboro, NC repair facility. Repair is available for both Schneider Electric and non-Schneider Electric equipment.

> Spare parts management

Save money and reduce downtime through our parts management program. An on-site assessment is performed to determine parts and inventory levels needed to ensure proper system operation and reduce downtime and inventory costs.

> Migration and modernization

Realize the productivity benefits of the latest Schneider Electric automation technology by using our assessment tools to identify and implement replacement of your legacy automation products, regardless of brand. We make extensive use of existing hardware and wiring for a cost-effective solution with minimal downtime.

> Software renewals


Access the latest software, firmware, and custom options to ensure you always have the latest functionality available to optimize your system's life cycle.

> Extended warranty

Extend your Schneider Electric standard manufacturer warranty from one year to five years. Protection plans are tailored to your needs reducing costs and out-of-service time.

>When it comes to your automation equipment, we can help you

- Increase productivity
- Improve reliability and safety
- Mitigate risk and limit downtime
- Keep equipment up to date
- Extend the life of your installed base
- Cut costs and increase savings
- Improve your return on investment

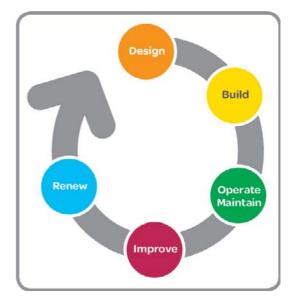

Talk to someone you can trust

The Altivar family of variable speed AC drives and the Altistart family of soft starts presents the most advanced and user-friendly solutions in the marketplace. Featuring proprietary motor control algorithms to achieve optimal reaction times and complete scalability to match your application requirements for speed, size, and protection, the complete line of Altivar and Altistart products provides the flexibility and performance to:

- Meet the needs of a broad range of industries, including HVAC, pump, material handling, hoisting, packaging and many more.
- Reduce your energy costs using proprietary energy-saving technologies available only from Schneider Electric.
- Improve your up-time by simplifying installation, commissioning and maintenance by providing advanced diagnostics, industry-leading voltage ride thru capability and seismic qualified products.

We also work with you to deliver the benefits of a global service and support of a global service and support organization to further increase the value of working with Schneider Electric. Our product specialists, industry experts, distributors, partners, and the countless other members of the Schneider Electric family are dedicated to helping you make the most of your energy everyday. Contact your local sales representative today to learn how Schneider Electric can improve operational performance and help your business to achieve a competitive advantage. Or visit www. schneider-electric.com

>Drive Product Support Group

For support and assistance, contact the Drive Product Support Group. The Drive Product Support Group is staffed from 8:00 am until 6:00 pm Eastern time to assist with product selection, start-up, and diagnosis of product or application problems.

EMERGENCY Technical phone support is available 24 hours a day, 365 days a year.

Toll Free **1-888-778-2733**

E-mail drive.products.support@us.schneider-electric.com

Fax **919-217-6508**

>Schneider Electric Service (On-Site)

The Schneider Electric Services division is committed to providing quality on-site service that consistently meets customer expectations. Services responds to your requests, seven days a week, 24 hours a day.

Phone **1-888-778-2733**

>Schneider Electric Customer Training

Schneider Electric offers a variety of instructor-led skill enhancing and technical product training programs for customers. For a complete list of drives/soft start training with dates, locations, and pricing please call:

Phone **978-975-9306** Fax **978-975-2821**

>Customer Care Center

(Assist with stock checks, assist with claims, and assist with order management issues)

To provide additional support, Schneider Electric has rolled out new Technical Service Representatives in local offices which have the strongest needs. Due to time zone changes and different time operation requirements business operation times vary.

Phone **888-778-2733** Fax **888-329-9773**



Mercedes Electric Supply https://mercedeselectric.com (305) 887-5550 marketing@mercedeselectric.com



Schneider Electric USA, Inc.

Schneider Electric USA, Inc. 8001 Knightdale Blvd. Knightdale, NC 27545

USA Customer Care Center Tel: 888-778-2733 © 2014 Schneider Electric. All Rights Reserved. Schneider Electric, Square D, Altistart, SoMove, PowerPact, Modbus, and TeSys are trademarks owned by Schneider Electric Industries SAS or its affiliated companies. All other trademarks are property of their respective owners.

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein.

Design: Schneider Electric Photos: Schneider Electric